

# Apartment equipment and furnishing

## Page 2

Microwaves

## Page 3

Oven function

## Page 4

Dishwasher  
Extra functions

## Page 6

Ceramic glass cooktop  
Extractor hood  
Hairdryer  
Fridge

## Page 8

Floor  
Windows  
Pull out bed  
Blackout  
Cleaning Kit





## Microwaves

### Microwave function

➔ Press On/Off ①

The microwave is automatically selected

The sign  is lit up.

➔ Turn the power :

900W: to heat liquids

600W: to heat and cook

360W: to cook meat to heat delicate food

180W: to defrost and continue gentle cooking

90W: to defrost delicate food

➔ Press the button  turn the round central button to select the chosen duration.

➔ Push  to start the cooking.

To modify the duration, just move the wheel button again.

➔ To modify the power of cooking, push  and then move to wheel button.

Once finished, the bell rings.

➔ Press  to stop the program and then  to switch off the item.

➔ Press the key ① to switch off the device.



Do not remove hot accessories from the appliance without protection.  
Use microwave-safe containers.

Do not heat food in heat preservation containers.



## Oven

### Oven function

➔ Press On/Off ①

select the oven touching  the sign is lighted up.  
Move the wheel button to choose the cooking function.



**Fan assisted heating** : to cook and grill (recommended with the microwave combination)



**Grill with fan assisted heating** : to grill and roast poultry and big pieces of meat



**Pizza** : for frosted convenience meals and dishes which need a hotter temperature in the under part.



**Grill** : to grill steak, sausages, toasted bread, and fish.

➔ The button “Kg” allows cooking a piece of meat according to weight.

➔ The button “plateful” allows cooking it’s capacity of a plate.

➔ Press .



➔ Press  setting the temperature with the rotary knob

➔ Press  to start the cooking.

**At the end of cooking, the signal sounds.**

➔ Pulsar  to turn off the device ②

# DISHWASHER

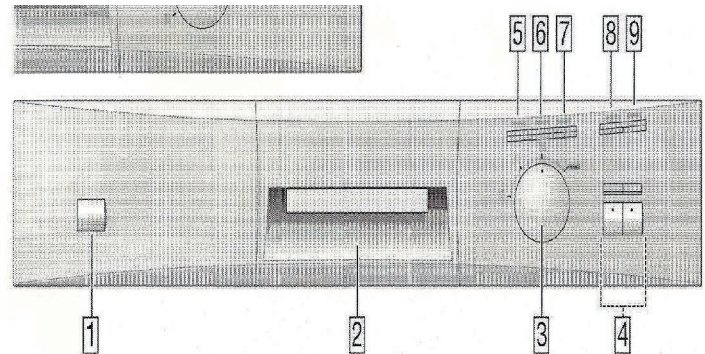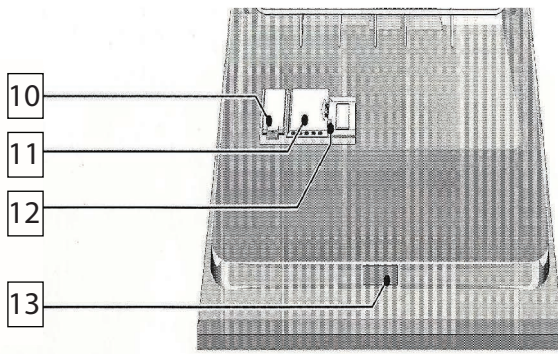

1. Main switch
2. Door opening handle
3. Program selector control
4. Additional features
5. Check water inlet" indication
6. Display of the washing phases
7. End of program" warning light
8. Warning light for rinse aid replacement
9. Salt Replenishment Warning Pilot
10. Polisher tank
11. Detergent cap
12. Detergent chamber
13. Type plate

## Functioning

Select the desired program with the rotary control.

**Intensive 70°:** casserole-type dishes, very dirty in large quantities.

**Normal 65°:** mixed crockery in large quantities, very dirty.

**Eco 50°:** small quantity of mixed crockery, normally dirty. Delicate

**45°:** few quantity of fragile crockery type glasses, cups.

**Fast 35°:** very little quantity of fragile crockery (without pre-wash).

**Prewash:** to spray the dishes before washing.

## Extra functions

- ➔ **Soak function:** this program is selected before selecting the type of wash to soak and soften the food remains of the dishes used (pots and pans for example).
- ➔ **Short 35° function:** by pressing the key, the washing and drying time of the dishes is reduced.
- ➔ **Medium function:** 1/2 key: reduces water and energy consumption and washing time. This function is used for a lightly loaded dishwasher with less dirt. Reduce the detergent dose by half.
- ➔ **Extra drying function 65°:** allows you to increase the temperature during the rinse cycle, thus improving the drying result.
- ➔ **In the dishwasher there is an open compartment, it is intended to put the tablet. To close the compartment, slide it to the side and, at the same time, lean on it to close the compartment properly. To open, press the small blue button.**
- ➔ **Before starting your dishwasher, you should turn the two propellers (high / low) to check that nothing obstructs the proper functioning of the device.**






**IN CASE OF TECHNICAL INTERVENTION CAUSED BY A MISUSE BY THE CUSTOMER, THE SERVICE WILL BE CHARGED.**


In case of any technical problem, please contact the reception.



## Glass-ceramic plate

### Functioning

- ➔ Click on the symbol  to turn the plates on. The indicators light up.
- ➔ Press again to switch off (it switches off automatically when all the plates have been switched off for 20 seconds).
- ➔ Repeatedly press the symbol  until the 0 indicator of the desired cooking zone lights up.
- ➔ Hold down the + or - symbol to adjust the cooking position, 1 is the minimum and 9 is the maximum.
- ➔ To turn off the board, select it with  and press - until 0 is reached. The waste heat indicator H appears. It shows that the plate is still very hot.

The key  allows the plate to be locked, for the safety of the children. To activate it, press and hold for a few seconds. To deactivate it, keep the key symbol pressed for several seconds. The appliance is now ready for use.

Rough bases scratch the glass ceramic. Placing hot ladles on the control panel can cause damage. Immediately remove any spilt food with a glass scraper.



## **Smoke extractor**

---

It is turned on by pressing the 0/1 button and if you continue to press 2 and 3, the extraction force is increased. Pressing the same 0/1 button turns off the extractor directly.

### **Electricity**

For the light, press the indicated button. To activate the electricity, insert the magnetic card of the apartment in the card slot inside the entrance. When you leave, do not forget to remove the card, all the lights and sockets will go out (only the refrigerator continues to work).

**In case of any technical problem, please contact the reception.**

## **Hair dryer**

---

It can be locked in the wall bracket: press the ON/OFF button. First turn the appliance ON, then move the power switch (1 and 2) and press the button to start it.

## **Fridge**

---

Do not place too many heavy bottles in the fridge door compartment. This compartment is fragile, we advise you to knock down the bottles.

## **Furniture fabrics**

---

Report immediately any incident that occurs, we have suitable products.

## Floor / Parquet

- ➔ Due to floor and wall protection measures, trolleys are not allowed inside.
- ➔ Please do not use water to clean the floor, just use the mop.

## Windows

- ➔ Close the doors well to avoid drafts and slamming doors.
- ➔ Before opening the window, it is advisable to move the curtains in the opposite direction to avoid breaking them.

## Extra bed

- ➔ The trundle bed is located under the sofa and is pulled at both ends.
- ➔ The extra clothes are kept in the entrance closet.

## Blackout 2nd room

- ➔ They work manually, ensuring total darkness in rooms exposed to light.

## Cleaning Kit

- ➔ Put at your disposal for the good maintenance of the kitchen.  
Containing:
  - ➔ 5 dishwasher tablets.
  - ➔ 1 non-abrasive sponge scraper, especially for glass-ceramic hobs.
  - ➔ 1 dispenser with dishwashing liquid.



➔ On your departure, please leave them in the apartment, please do not take them with you.

### Recommendations:

The use of bleach is totally prohibited for the cleaning of the apartment.



The fire blanket is at your disposal. Please use the blanket only in case of emergency.



Join our efforts for sustainability and save water and energy during your stay. Don't throw your wipes down the toilet, thank you.

