

CLUB HOTEL  
**marazul**



User's manual of household  
appliances and furniture

# Thank you for joining us!

We wish you a pleasant stay with us at Club Hotel Marazul.

In this manual you will find everything you need to enjoy your accommodation.

For further information or if you have any questions, please do not hesitate to contact the front desk. We would also like to remind you that there is a technical service available and that if you feel the need for help, you can contact the reception so that this service can be made available to you.



## 1 - Electricity

Pag. 2



## 2 - Blinds

Pag. 2



## 3 - Extra bed

Pag. 2



## 4 - Hairdryer

Pag. 2



## 5 - Flooring / Parquet

Pag. 2



## 6 - Windows

Pag. 3



## 7 - Cleaning kit

Pag. 3



## 8 - Extractor hood

Pag. 3



## 9 - Refrigerator

Pag. 3



## 10 - Microwave function

Pag. 4



## 11 - Oven function

Pag. 5



## 12 - Dishwasher

Pag. 6 y 7



## 13 - Glass ceramic cooktop

Pag. 8



## 14 - Telephone

Pag. 9

# 1 - Electricity

To turn on the electricity, insert the magnetic card in the card holder at the entrance. When you leave, do not forget to remove the card. All the lights and sockets will be switched off (only the refrigerator will remain operational).

**In case of any technical problems, please contact the reception.**

# 2 - Blinds

Located in the second room, the blinds are operated manually. They ensure that rooms exposed to light are completely dark.

**Only applicable to two-bedroom / 6-person apartments.**

# 3 - Extra bed

The extra bed is located under the sofa bed and can be pulled out through the two recesses. This bed is equipped with legs and wheels. It can be stationary or mobile according to your preference.

**Additional bed linen can be found in the wardrobe at the entrance of the flat.**

# 4 - Hairdryer

Start by adjusting the position of the button on the wall bracket and then the button on the appliance. Press "On" on the device, then move the knob to adjust the power (from 1 to 2) and press the knob to turn on the device.

**You will find the "on/off" safety mode on the wall bracket: before attempting to use the appliance, check that this button is in "on" mode to unblock it**

# 5 - Floor / Parquet

In order to protect the floor and walls, carts are not allowed inside the flats.

**Do not use water to clean the floor.**

**The use of household bleach to clean the flat is strictly forbidden.**



## 6 - Windows

Please close the doors to avoid draughts and slamming (only the front door is equipped with a brake).

**Before opening the window, it is recommended to draw the curtains in the opposite direction to prevent them from tearing.**

## 7 - Cleaning kit

In the kitchen, you will find a basic cleaning kit for good maintenance.

**Includes :**

- 5 dishwasher tablets
- 1 special non-abrasive sponge for glass-ceramic cooktop
- 1 manual dishwasher detergent dispenser

## 8 - Extractor Hood

To switch it on, start by pressing the 0/1 button. To increase the extraction force press either 2 or 3. Pressing the same button 0/1 switches the off the extractor

**To switch on the light, press the designated button.**

## 9 - Refrigerator

The refrigerator has a freezer compartment in the upper door.

Do not store heavy bottles in the refrigerator door compartment, as this compartment is fragile.

It is recommended to store bottles in a horizontal position.



For everyone's safety, dishwasher tablets should be kept out of the reach of children.



## 10 - Microwave function

Press  to turn on the equipment.

The appliance automatically switches to the microwave position.

The  symbol then lights up.

Adjust the power with the knob:

- 900W: heating of liquids
- 600W: heating and cooking
- 360W: cooking meat and heating delicate food
- 180W: defrosting and further cooking
- 90W: defrosting delicate food

Press the  timer button to set the time and turn the knob to select the desired time.

Press  to start heating

To change the heating time, simply turn the knob.

Press  and move the knob to change the cooking level.

When time reaches 0, the buzzer will go off.

Press  to finish the program.

To turn off the microwave oven, press 

Use microwave-safe containers.

Do not use plastic containers.









**Do not remove  
hot dishes  
from the oven  
without proper  
protection.**

## 11 - Oven function

Press  to select the oven function

The button lights up.

Move the knob to select the operating mode:

-  - Hot air: for baking and roasting, particularly suitable for use in combination with the oven.
-  - Grill mode with hot air: to roast poultry and bigger meat cuts.
-  - Pizza mode: for pre-cooked meals and meals that require heating from underneath.
-  - Grill : to roast and grill steaks sausages, toasts and fish in 3 different levels

Press  and set up the temperature with the rotating button

To select and define the timer, press  with the rotating button.

The « Kg » button will allow you to cook meat cuts according to their weight.



The « Garnished dish » option will allow you to heat up a previously cooked dish.

Press  to start cooking.

Once the dish is ready, the buzzer will go off.

Press  and then  to turn off the oven.

## 12 - Dishwasher instructions

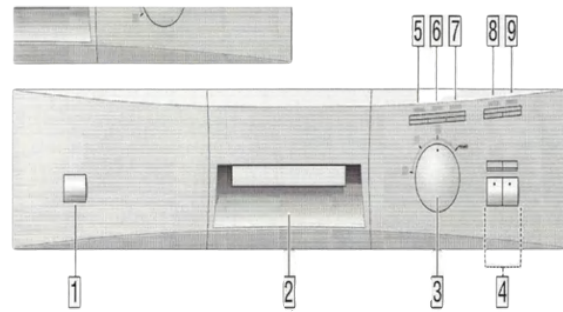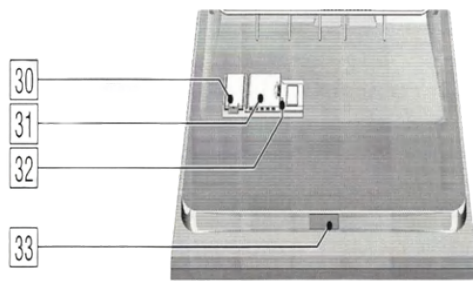

- 1 - Main switch
- 2 - Door lever
- 3 - Programme selector switch
- 4 - Additional features
- 5 - "Check water supply" display
- 6 - Washing phase display

- 7 - "End of programme" warning signal
- 8 - Rinse aid refilling for warning light
- 9 - Salt refill warning light
- 30 - Rinse aid container
- 31 - Detergent lid
- 32 - Detergent compartment
- 33 - Identification plate

Select the desired program with the rotating button:

- Intense 70° : for lot of crockery like very dirty saucepans.
- Normal 65° : for very dirty mixed crockery.
- Eco 50°: small amount of mixed crockery, in need of normal washing.
- Delicate 45°: small amounts of fragile crockery, in need of delicate washing.
- Fast 35°: very small amounts of fragile crockery, in need of delicate washing. No pre-rinsing.

Pre-wash: to rinse all crockery before starting any of the cycles mentioned above.



Technical intervention caused by misuse of the customer will be invoiced.  
In case of any technical problem, please contact the reception.

## 12 - Dishwasher instructions

### Additional functions

- Soak function: this function should be selected before selecting the type of wash to soak and soften the food residues of the dishes used (e.g. pots and pans).
- Short 35c° function: Pressing the button reduces the washing and drying time of the dishes.
- Half Load program (1/2 button): reduces water and energy consumption as well as washing time. This function is used for a lightly loaded dishwasher with less soiled dishes.

Remember to reduce the detergent dosage accordingly.

- Extra Dry function at 65°: allows you to increase the temperature during the polishing cycle, thus improving the drying result.

In the dishwasher, an open compartment is intended for the dishwasher tablet. To close the compartment, slide it to the side and press down at the same time to close the compartment tightly. To open, press the small blue button.

Before starting your dishwasher, it is advisable to rotate the two propellers - up and down - to check that nothing is obstructing the proper functioning of the dishwasher.





## 13 - Glass ceramic cooktop instructions

Press  to turn on the cooktop  
The display lights up.

Press  again to switch off.  
The cooktop will switch off automatically if the hobs are not being used.

Press  repeatedly until the 0 indicator for the desired hob lights up.

Press and hold down the + or - symbol to set the cooking position, 1 is the minimum and 9 is the maximum.



To switch off the hob, select it with  and press - until 0 is displayed.

**The residual heat indicator H appears.  
It shows that the hob is still very hot.**

If only one hob is in operation, press directly + or - during the cooking process without preselection.

To turn the ceramic cooktop off : press 

To double the cooking zone, press the power number twice : 1 = 1 cooking zone; 1. = double cooking zone.

To activate the child security system, press  , lingering for a few seconds.  
To deactivate it, keep pressing  for a few seconds.

The icon is turned off on the display.  
The device is ready to be used



Rough surfaces will scratch the glass ceramic hob.  
Placing hot containers on the control panel may cause damage.  
Remove any food spillage from the hobs immediately with a suitable sponge, available in your cleaning kit.

The fire blanket is at your disposal in case of emergency.  
Please use the blanket only in case of fire.

## 14 - Telephone

To reach an external line, dial 0.

To reach a foreign line, dial 0 and then the country code.

To reach your flat from another country

Dial 00 34 922 740 825 + 2 + the number of the desired flat.

To access this service, please contact the front desk.

To reach another flat within Club Hotel Marazul Residence :

From the 1st to the 9th floor: dial 2 + the number of the desired flat.

From the 10th to the 11th floor: dial the flat number directly.

To reach a bungalow

Bungalow A: dial 3 + bungalow number.

Bungalow B: dial 4 + bungalow number.

Bungalow C: dial 5 + bungalow number.

To set a wake-up call

From your flat, dial 88, then the 4 digits of your alarm clock and hang up.

Example: for 4am → 0400

To cancel the wake up call, dial 89 and it will be deactivated.

### Country codes

Spain: 0034

France: 0033

Belgium: 0032

Switzerland: 0041

Italy: 0039

Great Britain: 0044

Germany: 0049



# Take part in our efforts for sustainable development



Please try to save water and energy during your stay.



A recycling system is available, and Club Hotel Marazul provides you with proper waste disposal areas. The containers are located behind the lifts on each floor.



Please do not throw anything in the toilet except toilet paper (no wet wipes). For all other waste, please use the waste bins provided in your flat.



It is forbidden to hang laundry on the balcony handrail.



We kindly ask you to smoke exclusively on the terrace.

We wish you a great stay  
at Club Hotel Marazul!



In case of any difficulty,  
do not hesitate to contact us at any  
time at the front desk by dialling  
"9".